

[Click Here](#)































Home > Fixa & Renovera > Högtrycksvättar > Kärcher Högtrycksvättar > Kärcher K 5.85 M Högtrycksvätt Behöver du en bruksanvisning för din Kärcher K 5.85 M Högtrycksvätt? Nedan kan du se och ladda ner PDF-bruksanvisningen gratis på svenska. Den här produkten har för närvarande 3 vanliga frågor, 3 kommentarer och har 12 röster med ett genomsnittligt produktbetyg på 75/100. Om det här inte är bruksanvisningen du vill ha, vänligen kontakta oss.Är produkten defekt och erbjuder bruksanvisningen ingen lösning? Gå till ett Repair Café för gratis reparationsjänster. Berätta vad du tycker om Kärcher K 5.85 M Högtrycksvätt genom att betygsätta den. Vill du dela med dig av dina åsikter om denna produkt eller ställa en fråga? Lämna en kommentar nederst på sidan.Är du nöjd med Kärcher K 5.85 M Högtrycksvätt? Ja Nej Vi förstår att det är trevligt att ha en pappersbruksanvisning för din Kärcher K 5.85 M Högtrycksvätt. Du kan alltid ladda ner bruksanvisningen från vår hemsida och skriva ut den själv. Om du vill ha en originalbruksanvisning rekommenderar vi att du kontaktar Kärcher. De kanske kan tillhandahålla en originalbruksanvisning. Letar du efter bruksanvisningen för din Kärcher K 5.85 M Högtrycksvätt på ett annat språk? Välj ditt föredragna språk på vår hemsida och sök efter modellnumret för att se om vi har det tillgängligt. Märke Kärcher Modell K 5.85 M Kategori Högtrycksvättar Filtyp PDF Filstorlek 3.27 MB Alla bruksanvisningar för Kärcher Högtrycksvättar Fler bruksanvisningar för Högtrycksvättar Vårt supportteam söker efter användbar produktinformation och svar på vanliga frågor. Om du hittar en felaktighet bland våra vanliga frågor uppskattar vi om du meddelar oss detta via vårt kontaktformulär. Ja det kan du. Håll högtrycksvätten minst 20 centimeter från bilen och överstig inte ett tryck på 110 bar. Detta hjälpte (857) Läs mer En högtrycksvätt är en produkt med delar som vattnet rinner genom. Töm alltid den helt före förvaring för att förhindra frostsador. För att säkerställa att inga frostsador uppstår är det bäst att hålla en högtrycksvätt på en frostfri plats. Detta hjälpte (229) Läs mer PSI står för Pound per Square Inch, vilket indikerar ett tryck. Ju mer PSI en högtrycksvätt kan leverera, desto kraftfullare kan den rengöra. Detta hjälpte (228) Läs mer Here you can download discontinued product information, end-user guides, parts lists, service manuals and more. Many of these documents are available in other languages including French, German, Italian, and Spanish. You can purchase the parts listed in the operating instructions from all Kärcher retailers. Parts that are not listed can only be replaced by our trained service partners. Our service partners have access to the spare parts lists and can advise you on-site. Use the Find Parts link found on the product pages to lookup spare parts you can purchase from our service partners or Kärcher stores. To retailer and service partner search Home > Do-It-Yourself > Pressure Washers > Kärcher Pressure Washers > Kärcher K 5.85 M Pressure Washer Need a manual for your Kärcher K 5.85 M Pressure Washer? Below you can view and download the PDF manual for free in English. This product currently has 3 frequently asked questions, 3 comments and has 12 votes with an average product rating of 75/100. If this is not the manual you want, please contact us.Is your product defective and the manual offers no solution? Go to a Repair Café for free repair services. Let us know what you think about the Kärcher K 5.85 M Pressure Washer by leaving a product rating. Want to share your experiences with this product or ask a question? Please leave a comment at the bottom of the page.Are you satisfied with the Kärcher K 5.85 M Pressure Washer? Yes No We understand that it's nice to have a paper manual for your Kärcher K 5.85 M Pressure Washer. You can always download the manual from our website and print it yourself. If you would like to have an original manual, we recommend you contact Kärcher. They might be able to provide an original manual. Are you looking for the manual of your Kärcher K 5.85 M Pressure Washer in a different language? Choose your preferred language on our homepage and search for the model number to see if we have it available. Brand Kärcher Model K 5.85 M Category Pressure Washers File type PDF File size 3.27 MB All manuals for Kärcher Pressure Washers More manuals of Pressure Washers Our support team searches for useful product information and answers to frequently asked questions. If you find an inaccuracy in our frequently asked questions, please let us know by using our contact form. Yes, you can. Keep the pressure washer at least 20 centimeters from the car and don't exceed a pressure of 110 Bar. This was helpful (857) Read more A pressure washer is a product with parts through which water runs. Always empty it completely before storage to prevent frost damage. To ensure that no frost damage occurs, it is best to keep a pressure washer in a frost-free place. This was helpful (229) Read more PSI stands for Pound per Square Inch, indicating an amount of pressure. The more PSI a pressure washer can deliver, the more powerful it can clean. This was helpful (228) Read more K 5.85 M English 2 Español 17 Français 33 5.963-445.0 (11/09) HIGH PRESSURE WASHER OPERATOR MANUAL Overview 3 Important Safety Instructions 4 Assembly Instructions 6 Operating Instructions 7 Using the Accessories 8 Working with Detergents 9 Taking a Break 10 Shutting Down & Clean-Up 10 Winterizing and Long-Term Storage 11 Maintenance Instructions 11 Cleaning Tips 12 Optional Cleaning Accessories 13 Troubleshooting 15 Safety Alert Symbols DANGER indicates “an imminently hazardous situation which, if not avoided, will result in death or serious injury.” WARNING indicates “a potentially hazardous situation which, if not avoided, could result in death or injury.” CAUTION indicates “a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage incidents.” Specifications Max. Pressure 1850 PSI Max. Water Flow 1.5 GPM Amp draw 13 AMPS Voltage 120 V Part No. 1.396-703.0 Serial no. Owner/User Responsibility The owner and/or user must have an understanding of the manufacturer’s operating instructions and warnings before using this pressure washer. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer’s instructions and warnings shall be read to and discussed with the operator in the operator’s native language by the purchaser/owner, making sure that the operator comprehends its contents. Owner and/or user must study and maintain for future reference the manufacturers’ instructions. Customer Support USA and Canada In the U.S. or Canada, please call 1-800-537-4129 for warranty issues and visit www.karcher-help.com for technical support and product assistance. Please take a moment to register your pressure washer online at www.karcher-register.com. Be sure to save your purchase receipt, it will be required for repairs covered by warranty. Customer Support Mexico Call: 01-800-024-13-13 for help or visit our website: www.karcher.com.mx For household use only! 2 English MODEL OVERVIEW 1 Water inlet with garden hose connec- tor 2 ON/OFF switch 3 High pressure hose reel 4 Spray Wand Storage 5 Handle 6 Cord Hook 7 Power cord with Ground Fault Circuit Interrupter (GFCI) 8 Hand crank for hose reel 9 Detergent tank with Detergent metering regulator 10 Trigger gun 11 Key to detach the high-pressure hose from the trigger gun 12 Trigger gun safety lock 13 High pressure hose 14 Dirtblaster ® (Rotary spray wand) 15 Vario Power Spray wand English 3 IMPORTANT SAFETY INSTRUCTIONS WARNING When using this product basic precautions should always be followed, including the following: Read all the instructions before using the product. To reduce the risk of injury, close su- pervision is necessary when a product is used near children. Know how to stop the product and bleed pressures quickly. Be thoroughly familiar with the controls. Stay alert – watch what you are doing. Do not operate the product when fat-igued or under the influence of alcohol or drugs. Keep operating area clear of all per- sons. Do not overreach or stand on unsta- ble support. Keep good footing and balance at all times. Follow the maintenance instructions specified in the manual. This product is provided with a Ground Fault Circuit Interrupter built into the power cord plug. If replacement of the plug or cord is needed, use only identical replacement parts. WARNING Risk of Injection or Injury – Do Not Direct Discharge Stream At Persons. High pressure jets can be dangerous if misused. The jet must not be directed at persons, animals, electrical devices, or the unit itself. Wear safety goggles. WARNING Risk Of Explosion – Do not spray flammable liquids. Do not use acids, alkaline, solvents, or any flammable material in this product. These products can cause 4 English physical injuries to the operator and ir- reversible damage to the machine. CAUTION Gun Kicks Back – Hold with both hands. The Trigger Gun Safety Lock pre- vents the trigger from accidentally being engaged. This safety feature DOES NOT lock trigger in the ON po- sition. WARNING – Risk of Electrocutio n Inspect cord before using – Do not use if cord is damaged. Keep all connections dry and off the ground. Do not touch plug with wet hands. Do not use extension cord with this product. Connect to individual branch circuit only. CAUTION This unit has been designed for use with cleaning detergents recommended by the manufacturer. The use of other cleaning detergents may affect the operation of the machine and void the warranty. WARNING DO NOT SPRAY ELECTRICAL APPA- RATUS AND WIRING DO NOT USE WITH FLAMMABLE LIQUIDS AND TOXIC CHEMICALS. HIGH PRESSURE. KEEP CLEAR OF NOZZLE. INJECTION HAZARD: EQUIPMENT CAN CAUSE SERIOUS INJURY IF THE SPRAY PENETRATES THE SKIN. DO NOT POINT THE GUN AT ANYONE OR ANY PART OF THE BODY. IN CASE OF PENETRATION SEEK MEDICAL AID IMMEDIATELY. THIS SYSTEM IS CAPABLE OF PRO- DUCING 1850 PSI TO AVOID RUP- TURE AND INJURY, DO NOT OPERATE THIS PUMP WITH COMPONENTS RATED LESS THAN 1850 PSI WORKING PRESSURE (INCLUDING BUT NOT LIMITED TO SPRAY GUNS, HOSE AND HOSE CONNECTIONS). BEFORE SERVICING, CLEANING OR REMOVING ANY PARTS, SHUT OFF POWER AND RELIEVE PRESSURE. IF INSTRUCTIONS Requested Tools (not included) A Phillips Screwdriver, medium size for final assembly B Screwdriver, small size for connecting high pressure hose and trigger gun Assembly I STEP 1: I STEP 4: I STEP 5: I STEP 6: I STEP 2: I STEP 3: 6 English I STEP 7: Insert the small end of the high pres- sure hose into place. OPERATING INSTRUCTIONS I STEP 1: Unwind the high pressure hose completely from the hose reel. I STEP 2: Insert the spray wand of your choice into the trigger gun. Press in against the spring tension and twist into locked position. I STEP 3: Connect garden hose to unit's water inlet. I STEP 5: Plug the Ground Fault Circuit Inter- rupter (GFCI) into a working outlet. We recommend that you test the GFCI as part of your startup procedure each time you use your pressure washer. To learn how to perform this test on your unit, visit gfcI\_test.php for detailed instructions for your type of GFCI. WARNING Do not use if above test fails. Note: The actual appearance of the GFCI may be different from this illustration. I STEP 6: Unlock the trigger gun safety lock. Trigger the gun to eliminate trapped air, wait for a steady flow of water to emerge from the spray nozzle. I STEP 4: Connect garden hose to the cold water source and turn water on completely. I STEP 7: Turn on the high pressure washer (I/ ON). The motor starts only if the trigger of the gun is pulled and shuts off when the trigger is released. English 7 USING THE ACCESSORIES WARNING To avoid serious injury never point spray nozzle at yourself, other persons or animals. Always test an inconspicuous area before cleaning with high pressure. Vario Power Spray Wand The Vario Power Spray Wand allows you to adjust the cleaning pressure. To clean at maximum pressure, the wand must be positioned to the high pressure setting (Max). For reduced pressure turn the water collar in the „Min“ direction. To apply detergent, the wand must be positioned to the low pressure setting (Mix). Dirtblaster® This nozzle features a 0° pencil jet which rotates 360° for maximum dirt cutting action, effectively increasing cleaning performance up to 50%. This nozzle combines the cleaning performance of a 0° pencil jet with the surface coverage of a wide angle nozzle. Not recommended for soft materi- als, siding, painted surfaces, decks or autos. Before cleaning any surface an in- conspicuous area should be cleaned to test spray pattern and distance for maximum cleaning results. 8 English WORKING WITH DETERGENTS Detergents can only be applied at low pressure setting (Mix). I STEP 1: Install the Vario Power Spray Wand. Set the spray wand to the low pressure setting (Mix). I STEP 2: Fill the Detergent Tank with the selected detergent. I STEP 3: Adjust detergent metering regulator. – Medium quantity. Central position - Large quantity. “+” position - Small quantity. “-” position I STEP 5: Turn on the pressure washer (I). Pull trigger to operate unit. Liquid deter- gent is drawn into the unit and mixed with water. Apply detergent to work area. Do not allow detergent to dry on surface. I STEP 6: Cleaning up: Always draw fresh wa- ter through the detergent tank or si- phon tube when done to flush any remaining detergents from the injec- tion system. For best results see Cleaning Tips for specific information on how to clean different surfaces. Always Use Kärcher ® Detergent for Best Results Kärcher ® biodegradable detergents are specially formulated to protect the environment and your pressure washer. The special formula won't clog the suction tube filter and will protect the internal parts of the pressure washer for a longer life. For Kärcher ® Detergents, check your retailer or visit our website: www.buykarcher.com I STEP 4: To rinse, move the VPS out of „Mix“ position and pull trigger to operate unit. CAUTION Never use: - Bleach, Chlorine products and other corrosive chemicals - Liquids containing solvents (i.e., paint thinners, gasoline, oils) - Tri-sodium phosphate products - Ammonia products - Acid-based products These chemicals will harm the unit and will damage the surface being cleaned. Use of these items will void the warranty. English 9 TAKING A BREAK .five minutes or more I STEP 1: Release trigger and engage gun safety lock. I STEP 2: Turn pressure washer to OFF (0) position. SHUTTING DOWN & CLEAN-UP I STEP 1: Turn the switch to OFF (0) position and unplug cord from outlet. I STEP 2: Turn off the water source. I STEP 3: Press trigger to release water pressure. I STEP 4: Disconnect the garden hose from the water inlet on the unit. I STEP 5: Wind up the high-pressure hose on the hose reel. Push in the handle of the crank to block the hose reel. I STEP 6: Release trigger and engage gun safety lock. I STEP 7: Store the accessories on the unit. 10 English WINTERIZING AND LONG-TERM STORAGE I 1: Disconnect all water connections. I 2: Turn on the machine for a few sec- onds, until the water which had remained in the pump exits, turn off immediately. I 3: Do not allow high pressure hose to become kinked. I 4: Store the machine and accesso- ries in a room which does not reach freezing temperatures. DO NOT CAUTION Failure to follow the above directions will result in damage to the pump assembly and accessories and will void the warranty. Kärcher practice of using a pump protector like “Kärcher weather damage during storage in the winter months. ® also recommends the regular ® Pump Guard” to prevent cold store near freeze or other sources of heat as it may dry out the pump seals. CARE AND MAINTENANCE INSTRUCTIONS Cleaning the water inlet filter Maintenance I STEP 1: Pull out washer from the water inlet. I STEP 2: Pull out water inlet filter with flat-nose pliers. The unit is maintenance-free. I STEP 3: Rinse out water inlet filter in warm water. I STEP 4: Reinsert water inlet filter and washer into the water inlet. English 11 CLEANING TIPS CAUTION Before cleaning any surface an in- conspicuous area should be cleaned to test spray pattern and distance for maximum cleaning results. If painted surfaces are peeling or chipping, use extreme caution as pressure washer may remove the loose paint from the surface. When using on surfaces which might come in contact with food, flush surfaces with plenty of drinking water. For additional cleaning tips and a complete video library, visit our website: www.karcherresidential.com Deck Cleaning (with or without detergent). Pre-rinse deck and surrounding area with fresh water. If using detergent, apply to surface at low pressure. For best results, limit your work area to smaller sections of approximately 25 square feet. Do not allow detergent to dry on surface. Rinse at high pressure in a long sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. Always clean from top to bottom and from left to right. When moving on to a new section of the cleaning surface, be sure to overlap the previous section to eliminate stop marks and ensure a more even cleaning result. House Siding (with or without detergent). Pre-rinse cleaning surface with fresh water. If using detergent, apply to surface at low pressure (for best results, limit your work area to sections of approximately 6 feet and always apply detergent from bottom to top). Allow detergent to remain on surface 1-3 minutes. Do not allow detergent to dry on surface, if surface appears to be drying, simply wet down surface with fresh water. If needed, use special wash brush attachment (not included) to remove stubborn dirt. Rinse at high pressure from top to bottom in an even sweeping motion keeping the spray nozzle approximately 6 inches from the cleaning surface. Cement Patios, Brick and Stone (with or without detergent). Pre-rinse cleaning surface with fresh water. If using detergent or Degreaser, apply to surface at low pressure. For best results, limit your work area to smaller sections of approximately 25 square feet. Allow detergent or Degreaser to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure in a sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. Always clean from top to bottom and from left to right. For removing extremely stubborn stains, use the Dirtblaster ® Nozzle. Cars, Boats & Motorcycles (with or without detergent). Pre-rinse vehicle with fresh water. If using detergent, apply to surface at low pressure. For best results, clean one side of vehicle at a time and always apply detergent from bottom to top, do not allow detergent to dry on surface. If needed, use special wash brush attachment (not included) to remove stubborn dirt. Rinse at high pressure in a sweeping motion 12 English keeping the spray nozzle approximately 6-8 inches from the cleaning surface (distance should increase when rinsing pin-stripping or other sensitive surfaces). Always clean from top to bottom and from left to right. For best results, wipe surface dry with a chamois or soft dry cloth. Barbecue Grills, Outdoor Power Equipment & Gardening Tools (with or without detergent). Pre-rinse cleaning surface with fresh water. If using detergent or Degreaser, apply detergent at low pressure. Allow detergent to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure keeping the spray nozzle approximately 3-6 inches from the OPTIONAL CLEANING ACCESSORIES cleaning surface. For removing extremely stubborn dirt, it may be necessary to move the spray nozzle even closer to the surface for greater dirt cutting action. Patio & Lawn Furniture (with or without detergent) Pre-rinse furniture and surrounding area with fresh water. If using detergent, apply to surface at low pressure. Allow detergent to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. If needed use special Wash Brush Attachment (not included) to remove stubborn dirt. Rinse at high pressure in a sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. For best results, clean Optional accessories are available to further enhance your cleaning capabilities. These accessories are accurate as of the printing date of this manual. Please check our website for pricing and up-to-date information. Pump Guard Specially formulated to protect your pressure washer from freezing, corrosion and premature wear. The Pump Guard also adds lubrication to valves and seals to prevent sticking. Highly recommended for all Kärcher ® pressure washers! Part No. 9.558-998.0 25 Ft. Extension (Replacement High-Pressure Hose Replacement hose fits Kärcher sure washer with screw-on type gun ® press- connections from 2400 PSI to 2500 PSI. Extension Hose for all Kärcher ® high pressure washers between the original equipment hose and machine up to 2500 PSI. Part No. 2.640-850.0 66” Extension Wand (Four piece) Need to clean second story windows or other high areas? Increase the reach of your pressure washer by up to 66” with this extension kit. Includes 4 aluminum sections for variable length. 66” fully assembled. Fits most Kärcher ® pressure washers up to 2300 PSI. (bayonet) Part No. 2.640-746.0 Rotating Wash Brush (bayonet) For more effortless cleaning of all smooth surfaces (painted, glass and plastic) try the Kärcher ® Rotating Wash English 13 Brush. Use it on your automobile, house siding or windows. The water pressure from your pressure washer causes the inner brushes to gently spin, making your cleaning job much easier. The angle of brush head is adjustable to help you reach difficult areas. Excellent for the application of detergent. A musthave accessory designed for Kärcher ® pressure washers up to 2300 PSI. (bayonet) Part No. 2.640-743.0 Soft Clean Washing Brush Made with soft bristles that will not harm painted surfaces. Easily attaches directly to the trigger gun. Ideal for stubborn dirt on cars, boats, patio furniture and other surfaces. Great for applying detergent. Fits most Kärcher ® pressure wash- ers up to 2300 PSI. (bayonet) Part No. 2.640-740.0 25 ft. Pipe Cleaning Kit (bayonet) Need to clean blocked pipes, drains or downspouts? The Kärcher ing kit is the answer! The pipe cleaner propels itself forward while simultaneously flushing out debris. For example, insert the cleaning nozzle in the base of a downspout, pull the trigger on the pressure washer gun and watch as the nozzle shoots out leaves and other debris while climbing upward. Connects directly to the trigger gun of most Kärcher ® pressure washers up to 2300 PSI. (bayonet) Part No. 2.640-747.0 ® pipe clean- washer, add abrasive material and attack the rust and paint with our ecofriendly alternative. Fits most Kärcher pressure washers up to 2300 PSI. (bayonet) Part No. 2.638-792.0 Detergent Foamer Attachment Ideal for applications which require a thick foam. Simply fill the reservoir cup with liquid pressure washer detergent to generate a foam spray. Connects directly to the trigger gun. Fits most Kärcher pressure washers up to 2300 PSI. (bayonet) Part No. 6.964-507.0 T 100 Wide Area Surface Cleaner For cleaning surfaces such as patios, terraces and driveways without splashback, there is no better solution than the Kärcher ing a one foot wide area gently as it hovers, providing consistent, streak-free cleaning. When you finish cleaning the patio and driveway, remove the wand and use the handle to clean garage doors and other vertical surfaces. Includes two nozzles which spin at high speed for optimum results. Our top selling accessory for Kärcher washers up to 2300 PSI. (bayonet) Part No. 2.640-959.0 ® T 100. It saves time by clean- ® pressure ® ® Wet Sandblasting Kit (bayonet) Why spend hours stripping old paint and rust by hand using harsh chemicals? Let the Kärcher the work! Attach the kit to your pressure 14 English ® Wet Sandblasting Kit do TROUBLESHOOTING CAUTION Disconnect the machine from the power source before making any repair. Symptom Cause Solution Motor will not start On/Off switch is in the “OFF” (0) position. Power cord is not plugged in. Plug in power cord. Electrical outlet does not supply adequate power. Tripped GFCI plug. Press “RESET” button on tripped circuit breaker. Switch off pressure washer. Unit does not reach high pressure. Output pressure varies high and low. Diameter of garden hose is too small. Water supply is restricted. Check garden hose for kinks. Not enough inlet water supply. Open water source full force. Water inlet filter is clogged. Remove filter and rinse out in Spray wand is on low pressure position. Not enough inlet water supply. Turn water on full force. Check Pump is sucking air. Check that hoses and fittings Water inlet filter is clogged. Remove filter and rinse out in Discharge nozzle is obstructed. Calcified gun, hose or spray wand. Turn switch to the “ON” (I) position Try a different outlet. GFCI plug. The reset comes automatically once the temperature of the unit drops. Replace with a 5/8 inch or larger garden hose, leaks and blockage, warm water. Turn spray wand to high pres- sure position, garden hose for kinks, leaks or blockage, are air tight. Turn off machine and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle, warm water. Blow out or remove debris with a fine needle. Rin distilled vinegar through detergent suction tube. English 15 Here you can find online versions of the operating instructions for our cleaning machines. Here you can find the relevant operating instructions for every product. Our operating instructions provide information on use, safety, initial start-up, technical data, accessories and disposal information. Several languages are often covered by one operating manual. Synonyms for operating instructions, like user manual, operating manual and user handbook, are also used.